


# ULINE H-1886 INDUSTRIAL LAMINATOR

1-800-295-5510  
uline.com

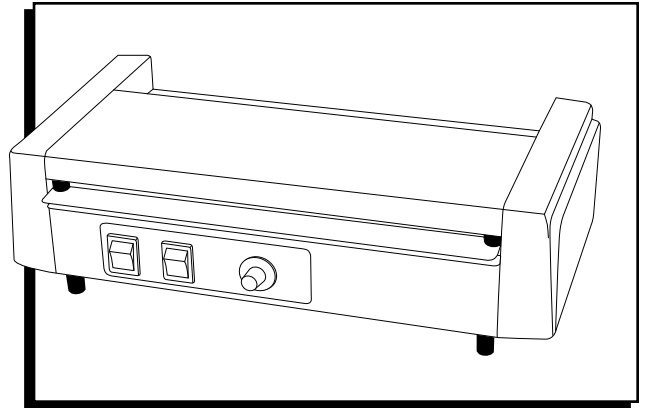

**WARNING!** For your protection, do not connect the laminator to electric power until you read these instructions.

## INSTRUCTIONS

Before operating the laminator, please review the following guidelines.

1. Determine the correct temperature setting for the pouch you intend to laminate.
2. Set temperature control to the prescribed setting.



**NOTE:** For first time operation, set the temperature to the lower end of the recommended temperature range and test lamination. If the pouch is not properly sealed, the temperature can be raised slightly and the pouch can be reprocessed at the higher temperature. If the temperature is set too high, the pouch and/or item being laminated may be damaged.

3. Turn GREEN POWER switch ON. Allow the laminator to warm up for approximately 2 minutes. Once laminator's temperature is ready, the AMBER READY/RUN switch light will begin to blink indicating the laminator is ready to laminate.

4. Place the item to laminate into the pouch. Then place the pouch into the carrier.
5. Press the AMBER READY/RUN switch ON. The motor will engage and the rollers will begin turning.
6. Insert the carrier into the front opening of the laminator. Insert the carrier lengthwise, folded edge first, straight into the opening.
7. The carrier will exit the rear of the laminator when the process is completed.

POUCH / TYPE	SETTING
3 MIL Pouch With Carrier	#1 to #2
5 MIL Pouch With Carrier	#2 to #3
7 MIL Pouch With Carrier	#3 to #4
10 MIL Pouch With Carrier	#3 to #4



**NOTE:** Start at the lowest temperature.