


ULINE H-1975 PACKING TABLE CASTERS

1-800-295-5510
uline.com

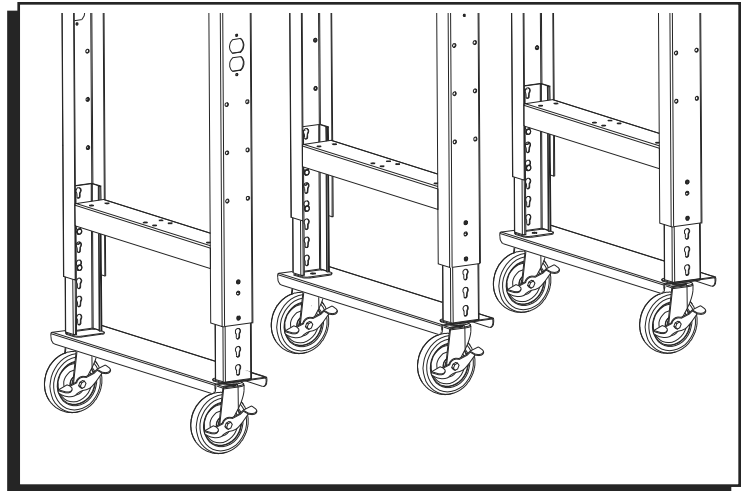

PARTS



Swivel Caster x 6



Nut x 6



Lock Washer x 6



Caster Plate x 3

ASSEMBLY

1. Align caster plate with holes in bottom flange of legs. (See Figure 1)

 **NOTE:** Caster must be turned as shown to fit inside of the channel.

2. Attach swivel casters with lock washers and nuts. (See Figure 2)

Figure 1


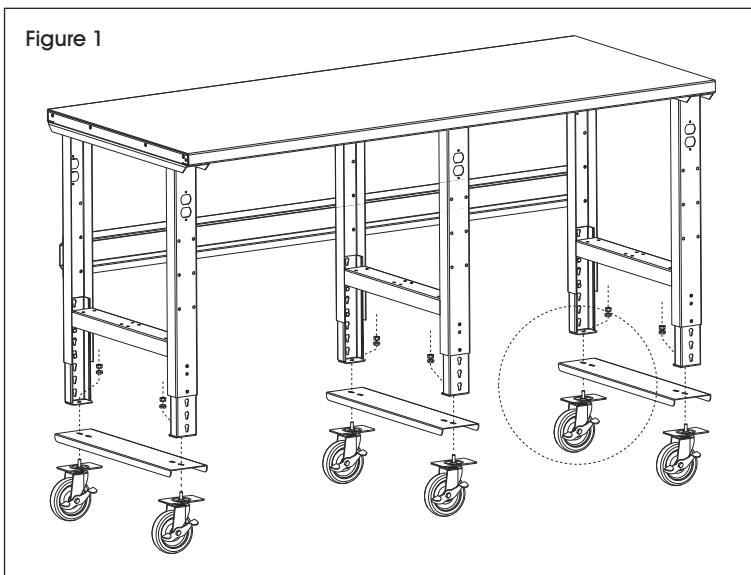


Figure 2

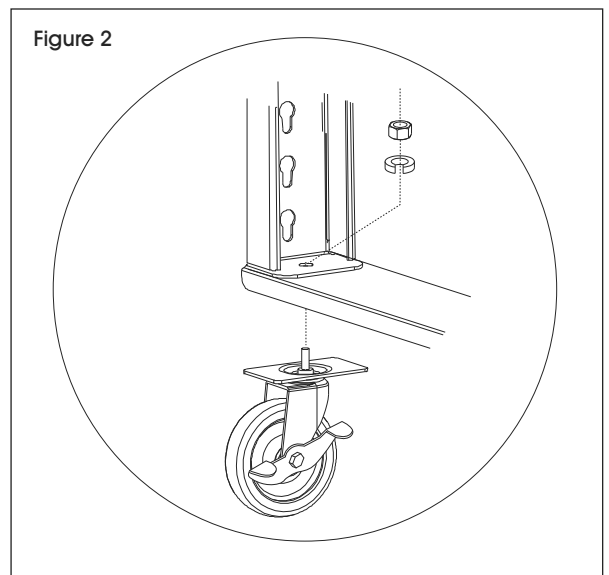


ULINE H-1975

RUEDAS PARA MESA DE TRABAJO

800-295-5510

uline.mx

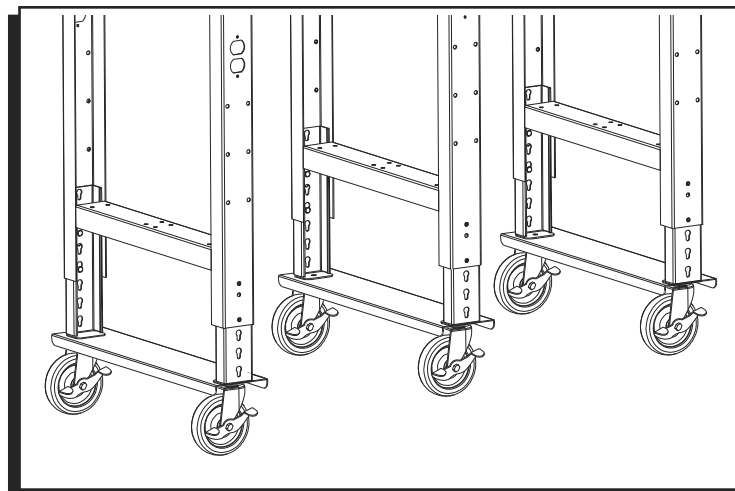

PARTES




6 Ruedas Giratorias



6 Tuercas



6 Rondanas de
Seguridad



3 Placas para Ruedas

ENSAMBLE

1. Alinee la placa de la rueda con los orificios de la pestaña inferior de las patas. (Vea Diagrama 1)



NOTA: La rueda debe estar girada como se muestra para insertarse dentro del canal.

2. Fije las ruedas giratorias con rondanas de seguridad y tuercas. (Vea Diagrama 2)

Diagrama 1


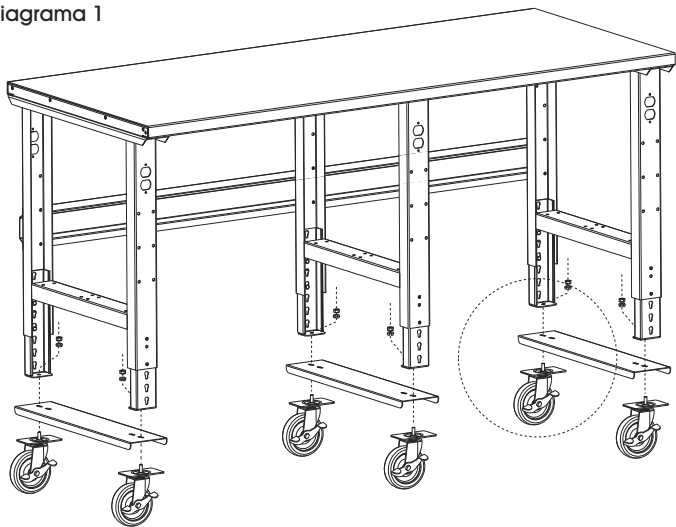



Diagrama 2

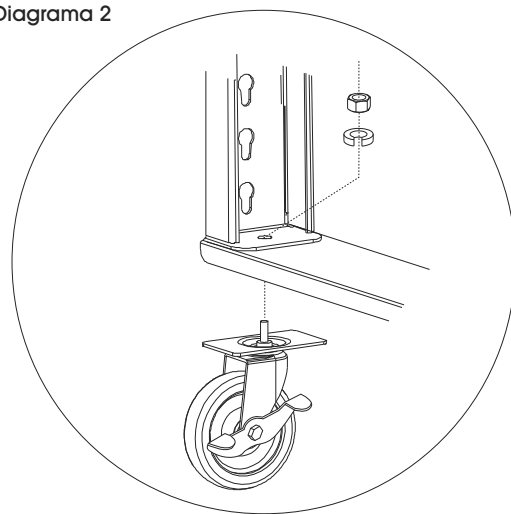

ULINE H-1975

ROULETTES POUR TABLE D'EMBALLAGE

1-800-295-5510
uline.ca

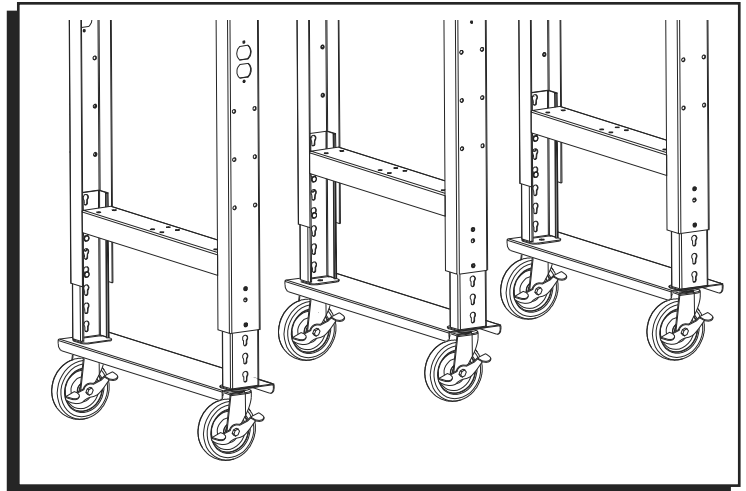

PIÈCES




Roulette pivotante x 6



Écrou x 6



Rondelle de blocage x 6



Plaque pour roulettes x 3

ASSEMBLAGE

1. Alignez la plaque pour roulettes sur les trous de la bride inférieure des pieds. (Voir Figure 1)



REMARQUE : Les roulettes doivent être placées de la façon illustrée pour s'insérer à l'intérieur des trous.

2. Fixez les roulettes pivotantes à l'aide de rondelles de blocage et d'écrous. (Voir Figure 2)

Figure 1

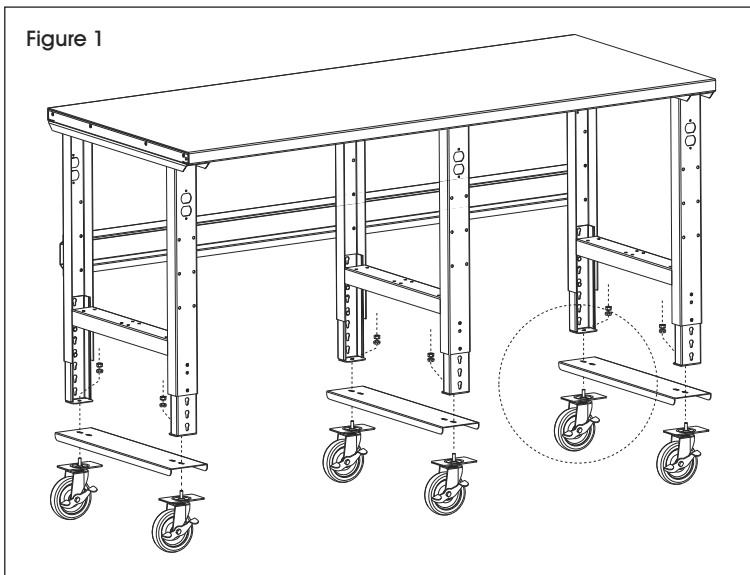


Figure 2

