


ULINE H-185, H-186 PEANUT DISPENSERS


20 AND 40 CUBIC FEET

1-800-295-5510
uline.com

TOOLS NEEDED



Flat Head Screwdriver



Pliers


RECOMMENDED HARDWARE (NOT INCLUDED)



Hook x 2



Cleat x 1

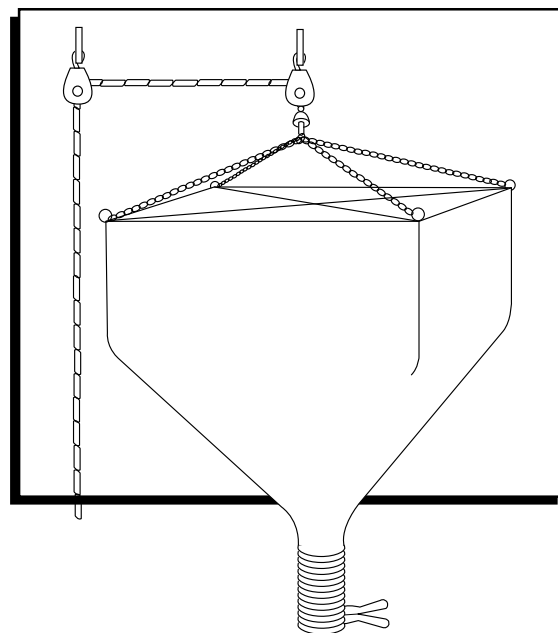

PARTS

PART	QTY	H-185	H-186
Capacity	-----	20 CU. FT.	40 CU. FT
Canvas Bag	1	✓	✓
Chain and Rope	1	✓	✓
Flex Tubing	1	✓	✓
Black Steel Rod	2	✓	✓
Valve Assembly	1	✓	✓
Clamp	1	✓	✓
U-Bolt	1	✓	✓
Pulley	2	✓	✓

INSTRUCTIONS




NOTE: Read instructions thoroughly. Remove all components from box and locate all parts. Remove pulley and U-bolt from rope.

INSTALLING PULLEYS

1. Attach pulleys to ceiling using hook or other secure method.
2. Make sure one pulley is positioned directly above the center of dispenser and the other clears the side of bag so rope will not interfere when raising and lowering bag. (See Figure 1)
3. Ensure rope tie-off method is in place (cleat, anchor, post, etc.) (See Figure 1)


Figure 1

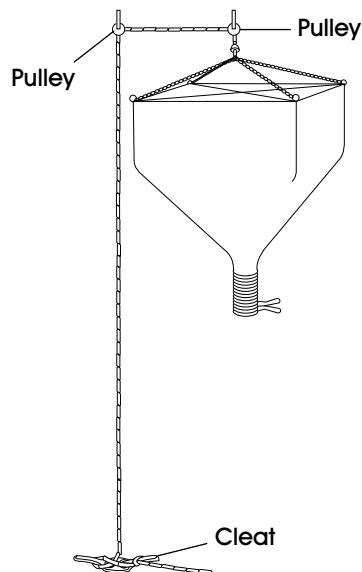


INSTRUCTIONS CONTINUED

INSTALLING VALVE ASSEMBLY


1. Slide clamp over open side of tubing. (See Figure 2)

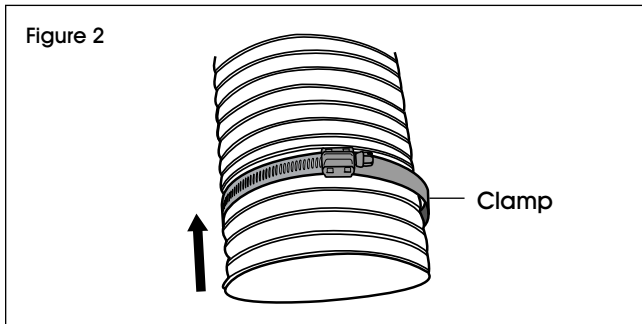

2. Insert valve assembly into bottom of flex tubing. Ensure tubing covers entire flange. (See Figure 3)

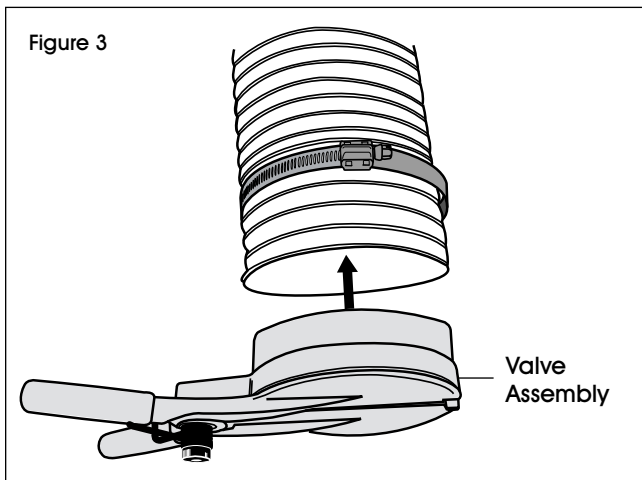


3. Turn yellow handles to desired position.
4. Slide clamp down around tubing, covering flange, and tighten screw with flat head screwdriver. (See Figure 4)

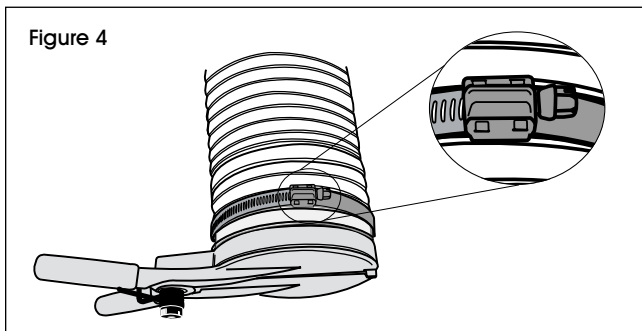


SETTING UP CANVAS BAG


1. Locate two black rods with tail ends. (See Figure 5)

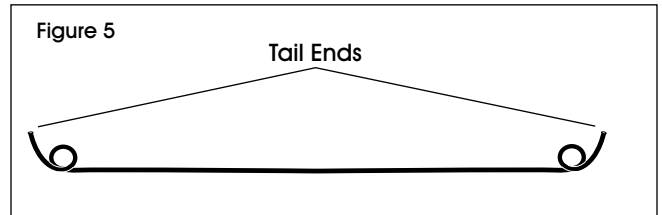

2. Insert end of chain link into the loop of rod. (See Figure 6)

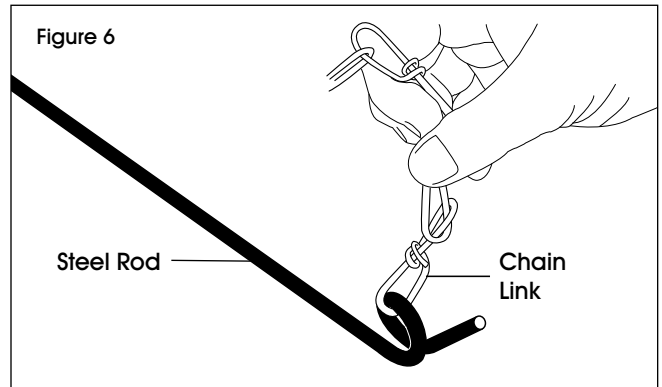


3. Repeat step two with the other chain links.
4. Insert one tail end through grommet at corner of canvas bag. Do not try to fit grommet into the loop.
5. Insert the other tail end through grommet on the opposite side of canvas bag. (See Figure 7)

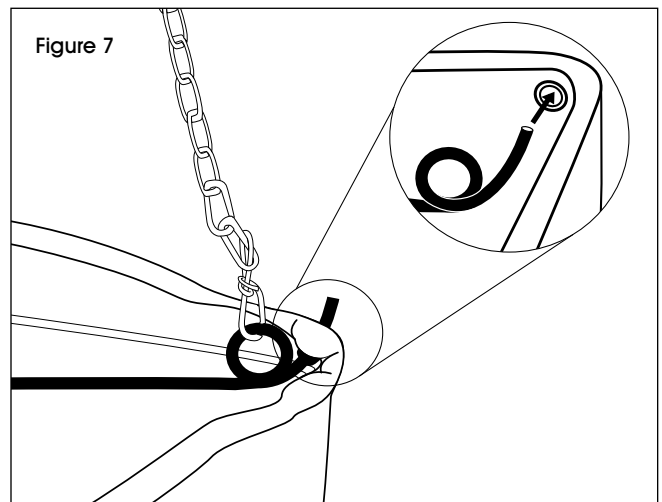


INSTRUCTIONS CONTINUED


6. Repeat step four and five with the second rod creating an "X" across the bag. (See Figure 8)

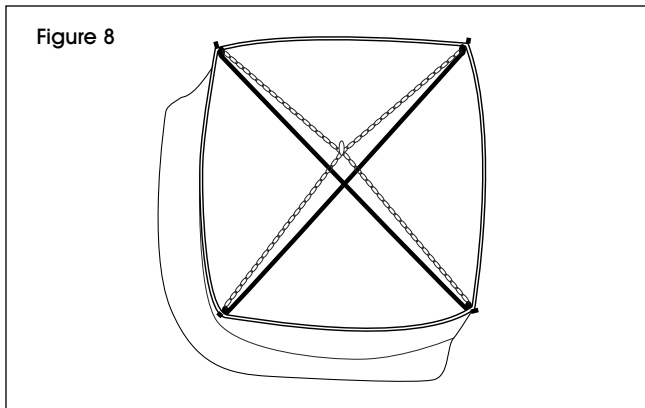


7. Locate U-bolt and remove the two nuts and plate from the bolt. (See Figure 9)

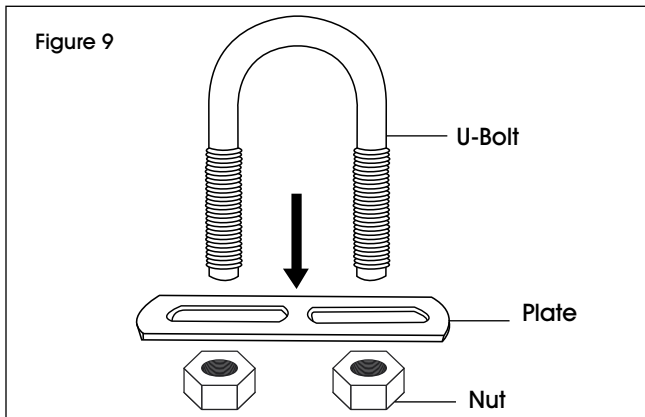


8. Place U-bolt in the center of rods "X" formation. (See Figure 10)

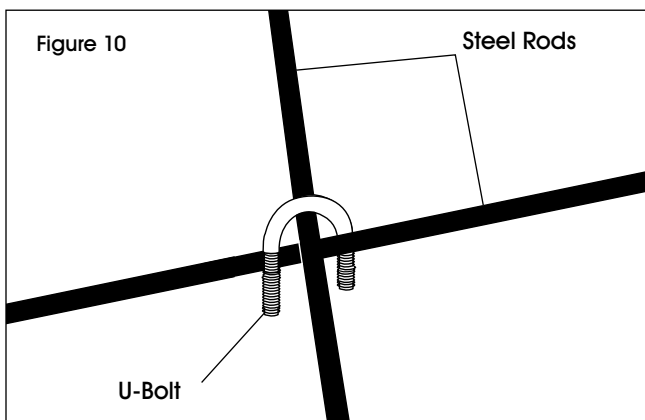

9. Insert plate then the two nuts from bottom. Tighten nuts with pliers. (See Figure 11)

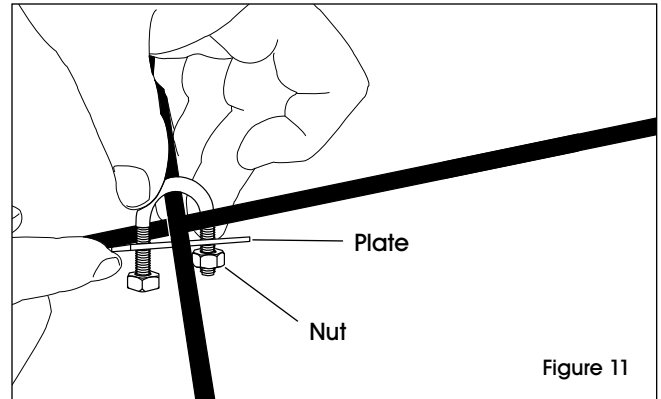

10. Thread rope through both pulleys. (See Figure 12)

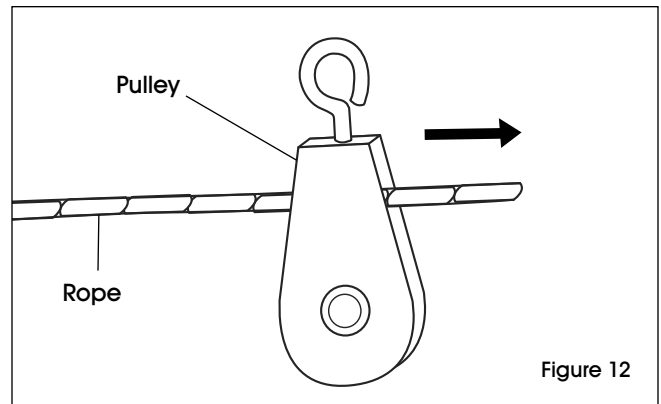

11. Raise bag to desired height and tie off rope. (See Figure 13)

