


# ULINE H-3174, H-6700


## CARPETED DECK PANEL TRUCK

1-800-295-5510  
uline.com


### TOOLS NEEDED



9/16" Wrench



11/16" Wrench

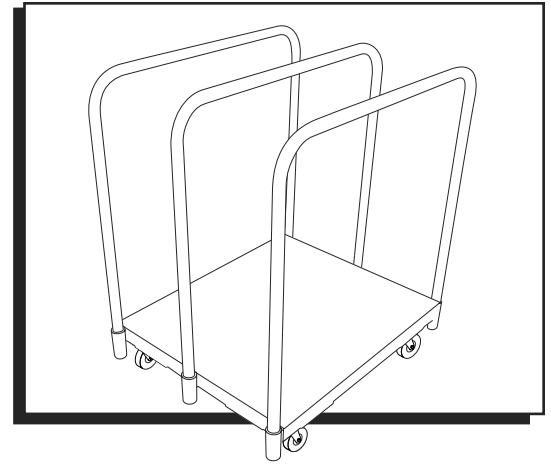

### PARTS



Small  
Lockwasher x 16



Small  
Washer x 16



Large  
Lockwasher x 2  
(x 4 for H-6700)



Large  
Washer x 2  
(x 4 for H-6700)




9/16" Bolt x 16




11/16" Bolt x 2  
(x 4 for H-6700)




Swivel Caster x 4

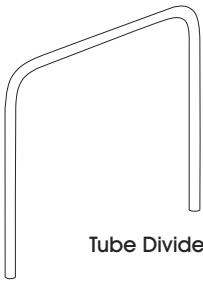

Tube Divider x 3

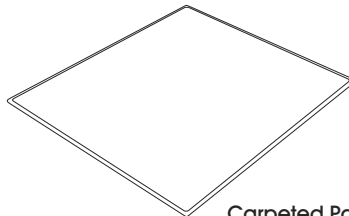


Carpeted Panel x 1

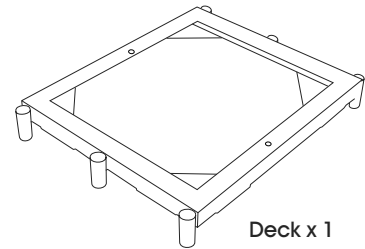


Deck x 1

### ASSEMBLY

1. Place deck on a smooth, non-marring surface with top side down. Mount swivel casters to deck with washers, lockwashers and 9/16" bolts. (See Figure 1)

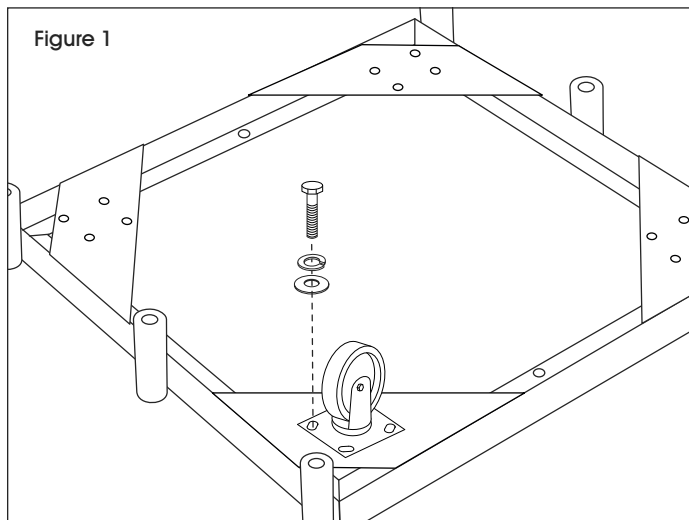

2. Flip deck over. Insert the tube dividers into the sockets of the deck. (See Figure 2)

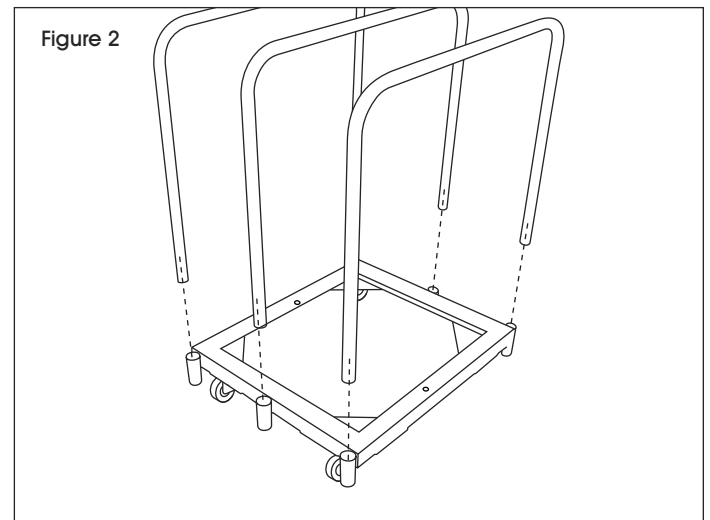

## ASSEMBLY CONTINUED

Figure 3


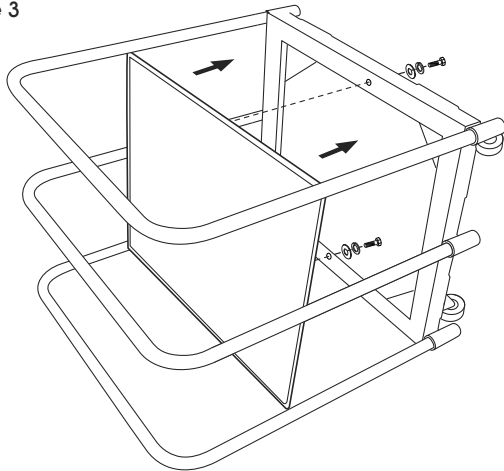


Figure 4



3. Carefully lay panel truck on side. Attach carpeted panel with two washers, lockwashers and 11/16" bolts from bottom. (See Figure 3)

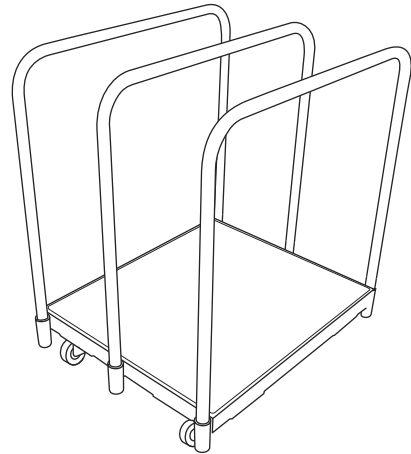

**NOTE:** For H-6700, attach carpeted panel from bottom using four washers, lockwashers and 11/16" bolts.

4. Carefully stand upright. (See Figure 4)